

NEUSPEED®

27mm REAR ANTI-ROLL BAR

FITS 2004-up VW TOUAREG

PART # 25.10.27.9

INSTALLATION INSTRUCTIONS

PARTS LIST:	1 – 27mm ANTI-ROLL BAR	1 – SYNTHETIC TEFLON GREASE
	2 – 10mm NYLOC NUTS	2 – POLYURETHANE BUSHINGS
TOOLS REQUIRED:	1 – RATCHET	1 – 16mm SOCKET
	1 – 12” EXTENSION	1 – 18mm WRENCH
	1 – 13mm SOCKET	1 – T40 TORX BIT

1. Park car on a flat, level surface capable of supporting the vehicle's weight on jack and jack stands.
2. Using the manufacturers recommended lifting point(s), raise rear of vehicle and support with jack stands. **NEVER WORK ON A VEHICLE SUPPORTED ONLY WITH A JACK!**



3. Unbolt the left and right rear muffler hangers from vehicle and allow exhaust to droop. There are (4) 13mm hex bolts, two on each hanger.



5. Unbolt anti-roll bar bushings mounts. There are (4) 16mm hex bolts, two on each clamp.




4. Unbolt anti-roll bar from end links using the 18mm wrench and a T40 Torx to keep stud from turning.



6. Move anti-roll bar rearward until ends clear suspension arm, and then slide out over exhaust pipe.



7. Using grease supplied, lube inside of poly bushings, and slip bushings over NEUSPEED anti-roll bar just inside of thrust washer. The larger diameter end of the poly bushing should be against thrust washer.

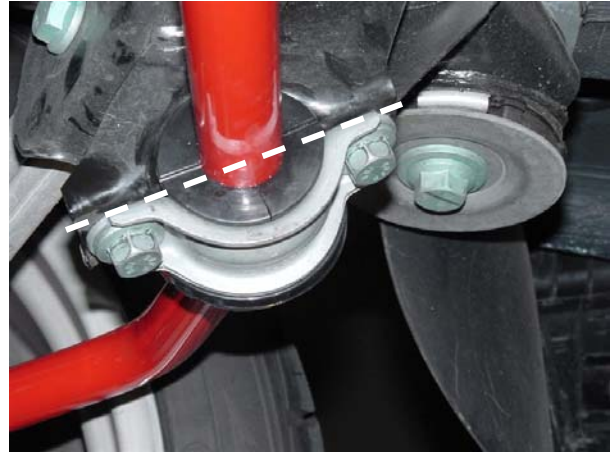

8. Install NEUSPEED anti-roll bar in reverse of disassembly. **NOTE:** Line-up groove on side of poly bushing with clamp when tightening.

9. Double-check complete installation and TEST DRIVE CAREFULLY.