

NEUSPEED®

UPPER STRUT TIE BAR 2004 ACURA TSX PART # 35.20.93 & 35.20.93P INSTALLATION INSTRUCTIONS

PARTS LIST: 1 – UPPER STRUT TIE BAR 4 – CAPS


TOOLS REQUIRED: 1 – RATCHET 1 – 12mm SOCKET 1 – 14mm SOCKET 1 – FLOOR JACK 1 – 3” SOCKET EXTENSION



1. With vehicle at rest and all four wheels on level ground, remove two outer nuts (14mm Hex) from left and right strut tower. (Driver side shown)



3. On some vehicles, it may be necessary to lower the strut assembly in order to install the bar. To do this, elevate the front of the vehicle per the manufacturers recommendations so that the wheels are slightly off the ground. Remove the two nuts securing the factory strut bar (12mm HEX). Slowly loosen the remaining strut assembly nut (14mm HEX) until the two outer studs protrude through the strut tower by 1/8”-1/4”. Position bar over studs and push down firmly. Repeat for opposite side. Lower vehicle and remove Jack (Driver side shown)

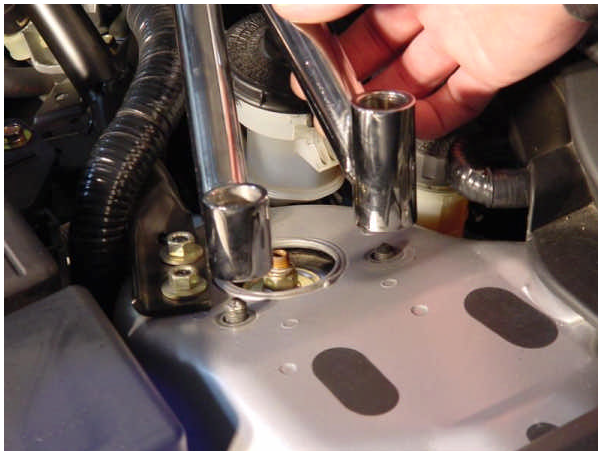

2. Position bar over studs on passenger side strut tower. Align bar over studs on driver side tower and push down firmly. (Driver side shown)



4. Start each strut tower nut by hand with 14mm socket and 3" extension (or 14mm deep socket) then torque to 33 ft.lbs. Torque nuts securing factory strut bar to 17 ft.lbs. (Driver side shown)



5. Install supplied caps on strut bar ends. (Driver side shown)



6. Installation complete

7. Double-check complete installation and TEST DRIVE CAREFULLY!