TORQUE ARM INSERT

2006-UP AUDI A3, 2006-UP GTI MKV, 2005-UP JETTA V, 2006-UP PASSAT, 2006-UP RABBIT MKV – FITS ALL MODELS

PART #22.10.91

INSTALLATION INSTRUCTIONS

PARTS LIST: 1 – URETHANE INSERT
1 – 3" SS FLAT WASHER
1 – 10MM FLAT WASHER

TOOLS LIST: 1 – 21MM SOCKET
1 – SILICONE SPRAY
1 – TORQUE WRENCH
1 – JACK
2 – JACK STANDS

1. Raise front of vehicle and support with jack stands under lifting points. **NEVER WORK UNDER A VEHICLE SUPPORTED ONLY WITH A JACK!**

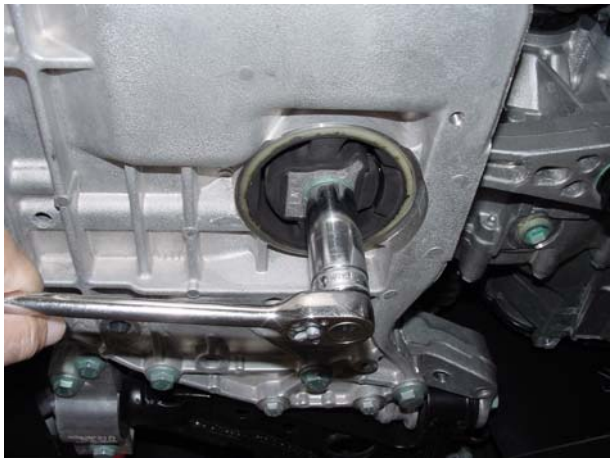

2. Unbolt the 21mm hex bolt from torque mount in aluminum sub-frame.

4. Install 10mm flat washer.

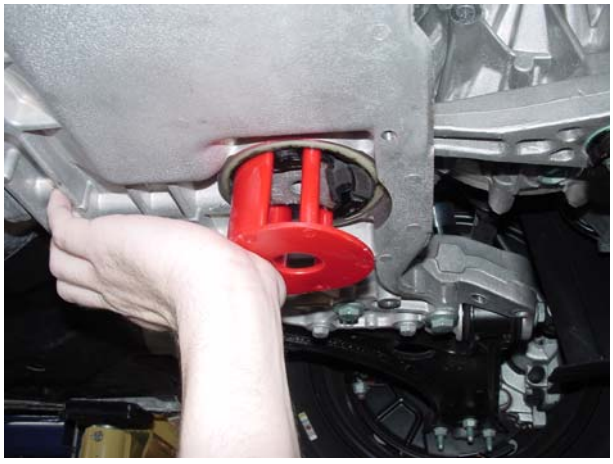

3. Use Silicone spray on urethane insert to ease installation, match up to rubber mount and push up until it bottoms out.

5. Install 3" stainless steel washer on to factory bolt and tighten into mount. Torque bolt to 74 ft. lbs.

Copyright 2006, Automotive Performance Systems, Inc. All rights reserved. Reproduction in whole or in part prohibited.
DOC.22.10.91 Rev. 07.06.06

Automotive Performance Systems, Inc. • 3300 Corte Malpaso • Camarillo, CA 93012
805.388.7171 • 805.388.0030 FAX • information@neuspeed.com
Visit us on the web…http://www.neuspeed.com